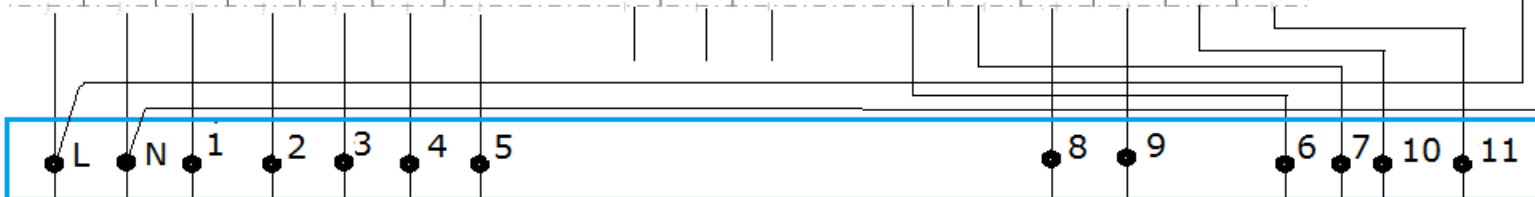
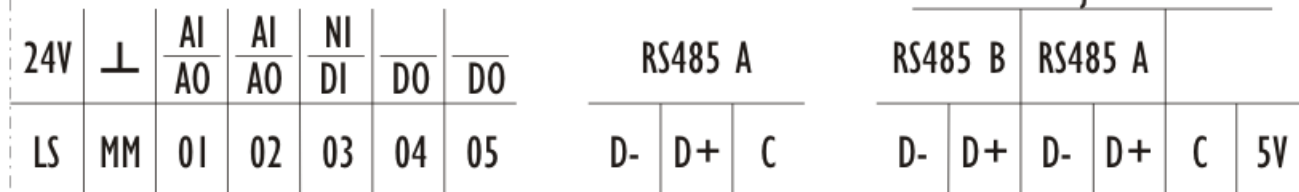


ASV2x5BF132

Adr. 101

Rj12

Till EY-RC504
SLC-A Bus

Plint	Inställning	Funktion	Beskrivning
1	AI	0...10V	Ri= 100 kohm
2	AO	0...10V	Last > 10 kohm
3	UI	NI1000/PT1000/NTC10K	0-50 grC
4	DO	0/1	0.3 A vid 24 V AC/DC
5	DO	0/1	0.3 A vid 24 V AC/DC
6	RS485-B	D-	Rumsenhet, I/O modul, bus
7	RS485-B	D+	
8	RS485-A	D-	SLC Bus anslutning till ecos504/505, BACnet MS/TP eller CASE VAV verktyg
9	RS485-A	D+	
10		C	Signal jord
11		5V	Matning för rumsenhet

EY-EM514F001

 $\Sigma I_{max} \leq 10 A$

L/LS N/MM

