
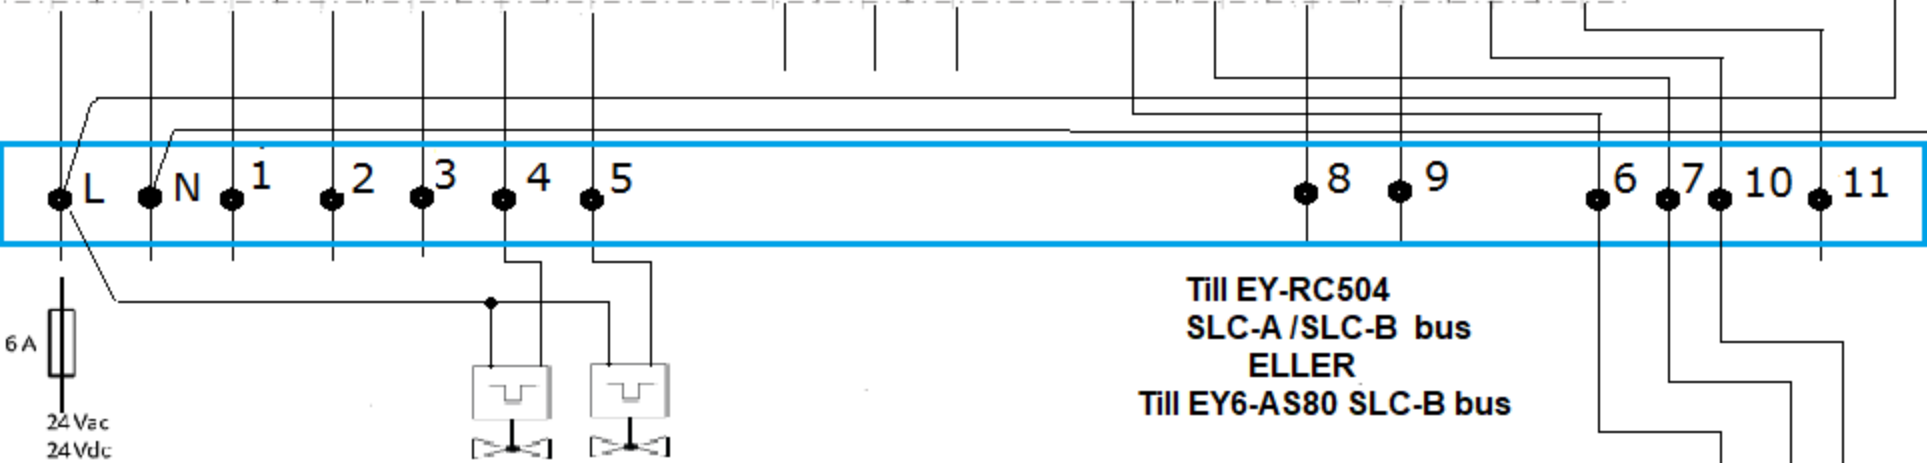


ASV2x5BF132


**Adr. 100**

Rj12

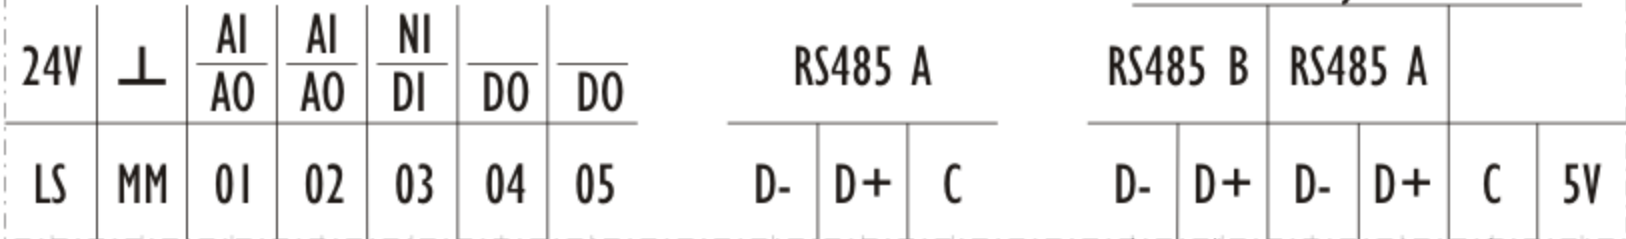

Till EY-RC504  
SLC-A/SLC-B bus  
ELLER  
Till EY6-AS80 SLC-B bus

**EY-EM514F001**

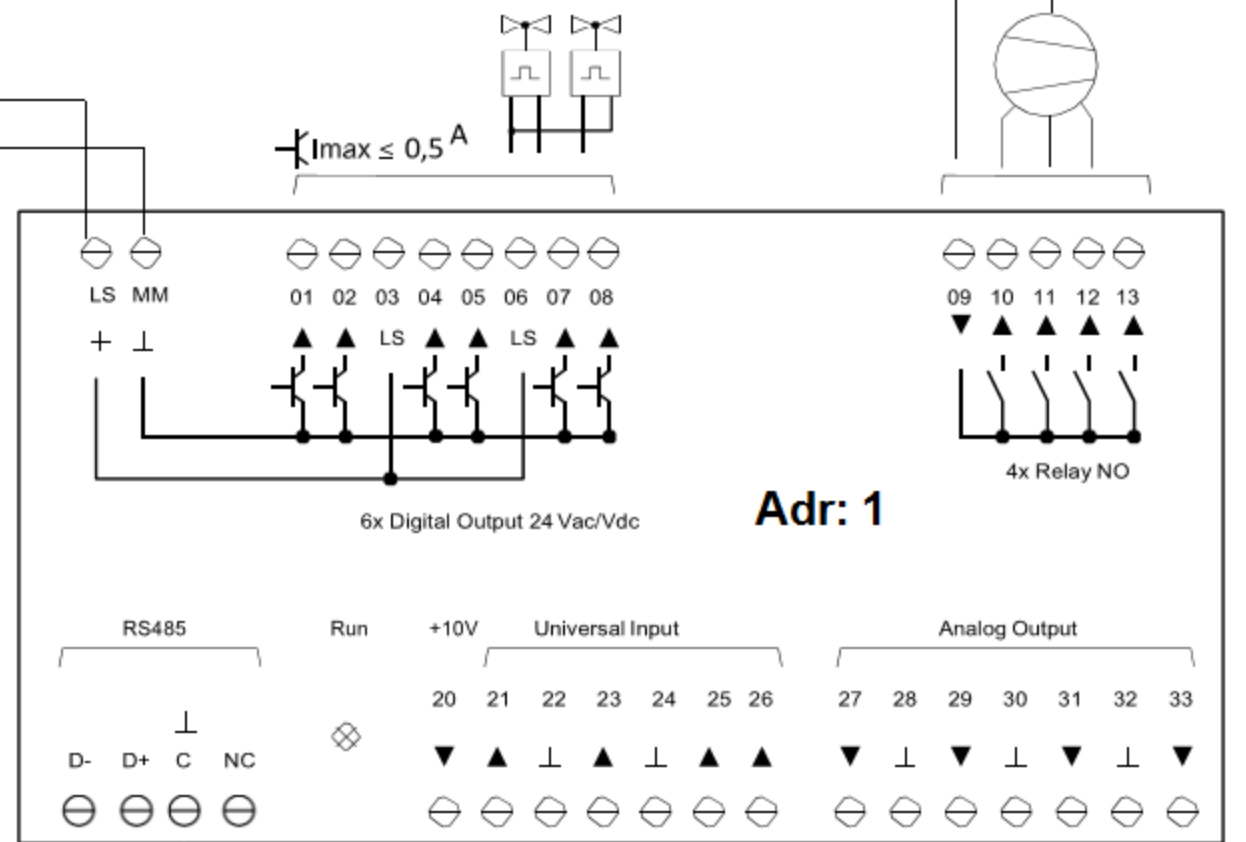

**Adr: 1**

Plint	Inställning	Funktion	Beskrivning
1	AI	0...10V	Ri= 100 kohm
2	AO	0...10V	Last > 10 kohm
3	UI	NI1000/PT1000/NTC10K	0-50 grC
4	DO	0/1	0.3 A vid 24 V AC/DC
5	DO	0/1	0.3 A vid 24 V AC/DC
6	RS485-B	D-	Rumsenhet, I/O modul, bus
7	RS485-B	D+	
8	RS485-A	D-	SLC Bus anslutning till ecos504/505, BACnet MS/TP eller CASE VAV verktyg
9	RS485-A	D+	
10		C	Signal jord
11		5V	Matning för rumsenhet

