



Installation instructions

AMBUS[®] Win II Installation Manager

Installation of AMBUS[®] Win II and device drivers

Software Version 1.3.1

Table of contents

1	Programme description	3
2	Requirements	3
3	Installation	3
3.1	<i>Installation overview</i>	3
3.2	<i>Select operating language</i>	4
3.3	<i>Start window</i>	4
3.4	<i>Licence agreement</i>	4
3.5	<i>Function (automatic, user-specific; remove)</i>	5
3.6	<i>Package selection during installation</i>	5
3.7	<i>Package selection during removal</i>	6
3.8	<i>Start installation (Overview)</i>	7
4	Help on installation problems	8

1 Programme description

The AMBUS® Win II Installation Manager can be used for the simple installation of the M-Bus parameterisation software AMBUS® Win II. It is used to:

- Install AMBUS® Win II
- Add, remove or display the M-Bus device drivers.

Usage of AMBUS® Win II is described in the software user manual.

2 Requirements

Operating system: Windows XP, Vista, 7.
 Software: Microsoft .Net 2.0 Runtime Environment
 Windows Installer 4.5 or higher
 Rights: The user needs administrator rights on the target computer

3 Installation




The Installation Manager can be run both from a CD/DVD as well as from a local hard drive. For easier handling the Installation Manager is installed on the target computer.

3.1 Installation overview

A requirement for installing the application is that the package is either available on a medium (CD/DVD) or was downloaded from the Aquametro Website in the form of a compressed Zip file.


CD or DVD		Zip file
Place the CD/DVD in the drive, the installation starts automatically. Note: This function may be deactivated. In this case, select and activate the "Setup.exe" programme in the computer 'Start' menu.		Open the file in Windows Explorer and start the "Setup.exe" programme.
Select operating language Accept licence agreement Select function		
Automatic	User-defined	Remove
Complete installation	Package selection during installation Specify file paths Complete installation	Package selection during removal Complete removal

The following buttons occur in several windows:

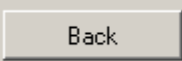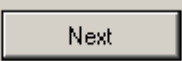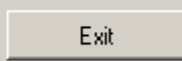		
Back to the previous step	Forward to the next step	Abort installation and exit programme

It is possible to install separate components later.

3.2 Select operating language

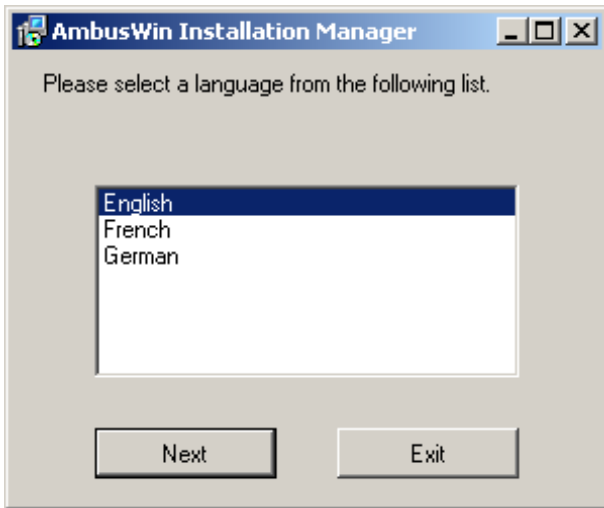


Select a language and continue the process by clicking on 'Next'.
By clicking on 'Exit', installation is aborted

3.3 Start window



The AMBUS® Win II Installation manager appears with the following window. The version is displayed at the bottom left.

3.4 Licence agreement

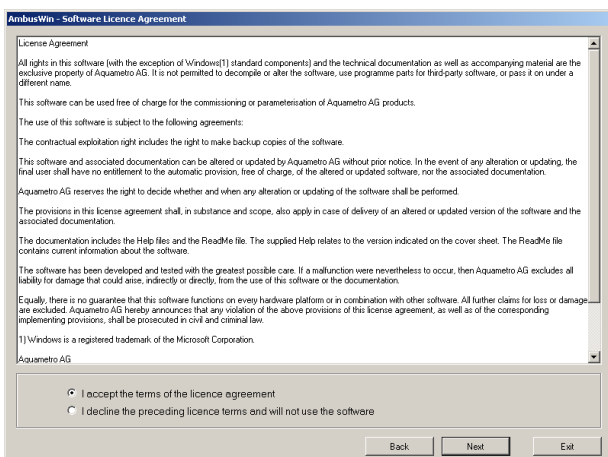


If you agree with the Licence agreement, please confirm this by selecting the appropriate text line with your mouse and then click on 'Next' to go to the next step.

If you don't agree, click on 'Decline' and terminate the programme by clicking on 'Exit'.

3.5 Function (automatic, user-specific; remove)

In this window, you specify what you want the installation software to do:

1. Automatic installation	Installs the software with the most standard components
2. User-defined installation	Selection of the components to be installed
3. Remove	Removes components

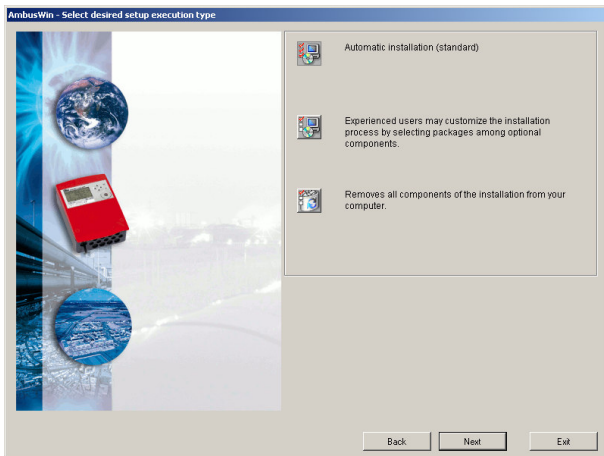

Depending on the function chosen, the steps listed below will follow:


Automatic	User-defined	Remove
<ul style="list-style-type: none"> Standard file paths are created Complete installation 	<ul style="list-style-type: none"> Specify file paths Package selection during installation Complete installation 	<ul style="list-style-type: none"> Package selection during removal Complete installation

3.6 Package selection during installation

The Package selection window shows the components available in the source directory:

Titel, Produkt	Version	Installiert	Aktion	Zielverzeichnis
Available components	Not installed components	Installed Components	Chosen action	Installation Folder

By clicking on the + and – symbols of the directory tree, the individual components can be displayed.

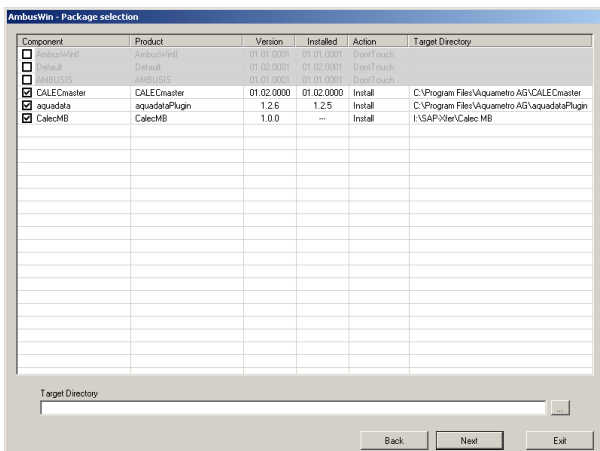

If you mark a component, that package is selected for installation. Each mark can also be removed again.

If it is possible to install a component and the line is selected, the installation folder can be changed in the edit box below the table.


Note:

No driver can be installed without AMBUS® Win II. If a component is already installed, you can select only components more up to date. To install older versions first remove the newer ones.

3.7 Package selection during removal

If the Remove function was selected, the following window appears, which shows all the installed packages.


Titel, Produkt	Version	Installiert	Aktion	Zielverzeichnis
Available components	Not installed components	Installed Components	Chosen action	Installation Folder

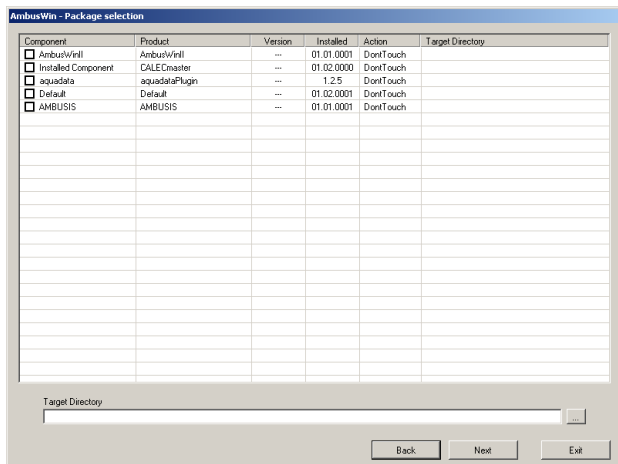

If you mark a component, that package is selected for removal. Each mark can also be removed again.

3.8 Start installation (Overview)


The Overview window displays the main information about the selected installation process before this is implemented. This is the last opportunity to abort the process by clicking on 'Exit'. The list entitled Action shows the individual steps in the sequence in which they are executed. By clicking on 'Start', the installation process begins. The window displays a protocol of the individual steps with messages.

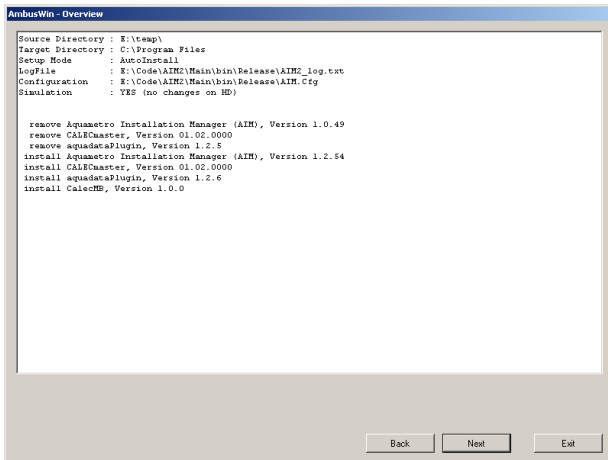

Attention!

It is not possible to reverse the installation with the 'Back' key. If an installation is to be reversed, then the components must first be removed, and the old components must be reinstalled from the source data medium.

Completion of installation

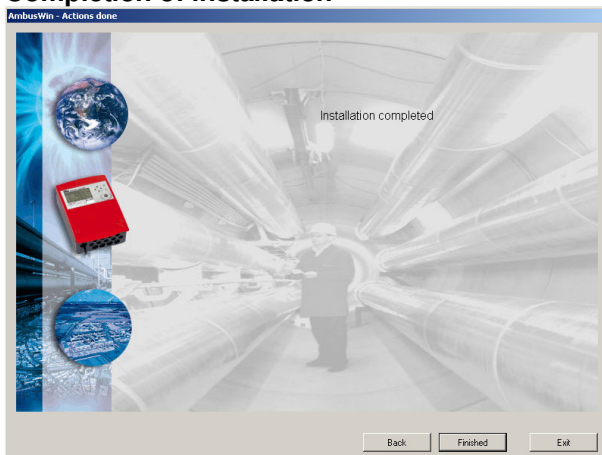

When the window 'Actions done' appears, the installation has been successfully completed. Clicking on the 'Finished' button ends the programme.

4 Help on installation problems

If, after uninstallation of a part of AMBUS Win II, something remains on your machine, you can cleanup windows registry with AMBUS® Win II Installation Manager. Select funktion ‚Remove’ (Step 3.5) and on the next page button ‚Cleanup registry’.

AmbusWin - Package selection


Component	Product	Version	Installed	Action	Target Directory
<input type="checkbox"/> AmbusWin Component	AmbusWinII	---	01.01.0001	DontTouch	

Target Directory: ...

The list in the following dialog shows some components, which you can select to be removed.



You can damage your AMBUS® Win II installation, by manipulating windows registry. If you are not sure of what to do, search for competent support.

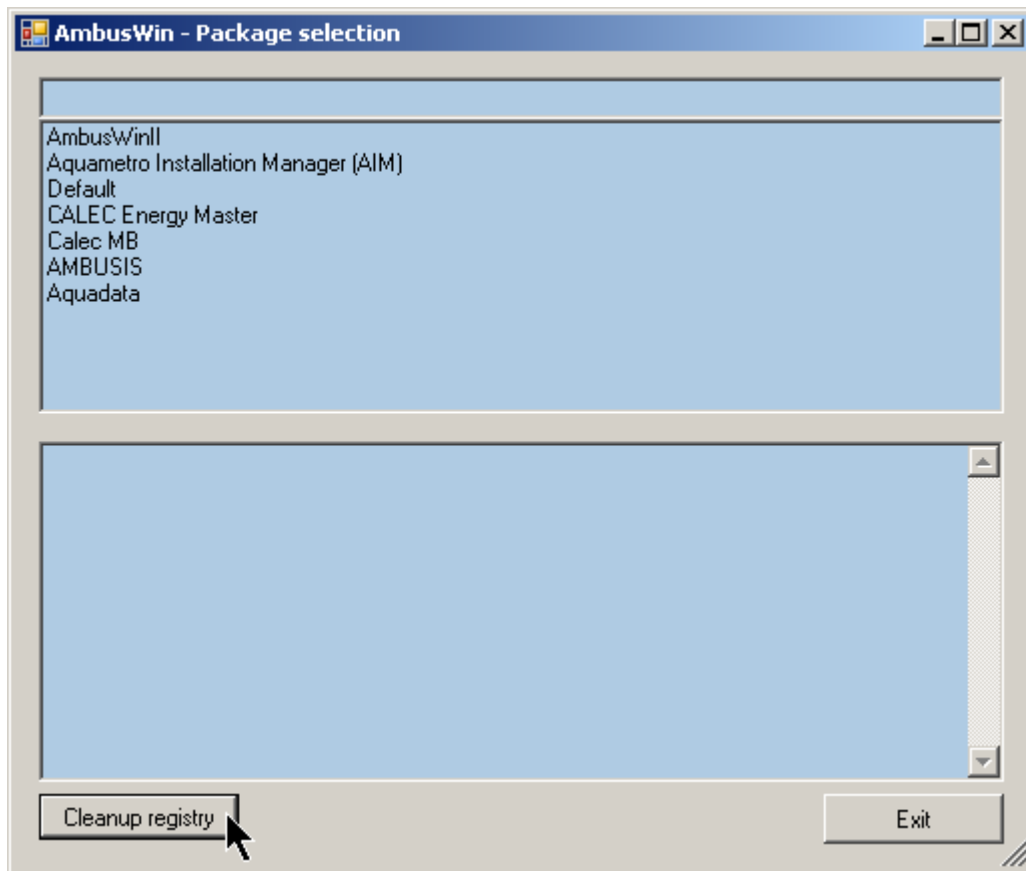

Registry keys to be deleted will be stored in the following folder:

C:\Documents and Settings\All Users\Application Data\AmbusWinII

Änderungen vorbehalten / Sous réserve de modifications / Modification rights reserved / Copyright © Aquametro AG

Aquametro AG

Ringstrasse 75
CH-4106 Therwil
Phone +41 61 725 11 22
Fax +41 61 725 15 95
info@aquametro.com
www.aquametro.com

Aquametro SA

Rue du Jura 10
CH-1800 Vevey
Phone +41 21 926 77 77
Fax +41 21 926 77 78
info.vevey@aquametro.com

Aquametro

Messtechnik GmbH
Zum Panrepel 24
D-28307 Bremen
Phone +49 421 871 64 0
Fax +49 421 871 64 19
info.amd@aquametro.com

Aquametro

BELGIUM SPRL
Dallaan, 67
B-1933 Sterrebeek
Phone +32 2 241 62 01
Fax +32 2 216 22 63
info.amb@aquametro.com